

Control Panel Removal

Remove Inside and Outside
Decals/Stickers

Remove Outer (4) Screws
and Inner (4) Screws

Pull Control Panel Outward
To Remove

Disconnect The Connections

**THIS IS THE CONNECTION
THAT MAY NOT BE
CONNECTED OR HAS COME
LOOSE.**

